AMBROGIO




AMBROGIO











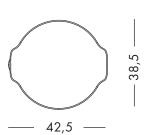

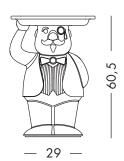

	Category:	Servant table		Packaging dimensions:	48 x 48 x 67 cm
	Years of production:	2022		Packaging volume:	0,154 m ³
	Materials:	Polyethylene / EcoAllene		Total weight:	6,5 Kg
17	Dimensions:	42,5 x 38,5 h 60,5 cm	DNIS	No. of cartons:	1
PRODUCT	Weight:	3,5 Kg	PACKAG	Notes:	

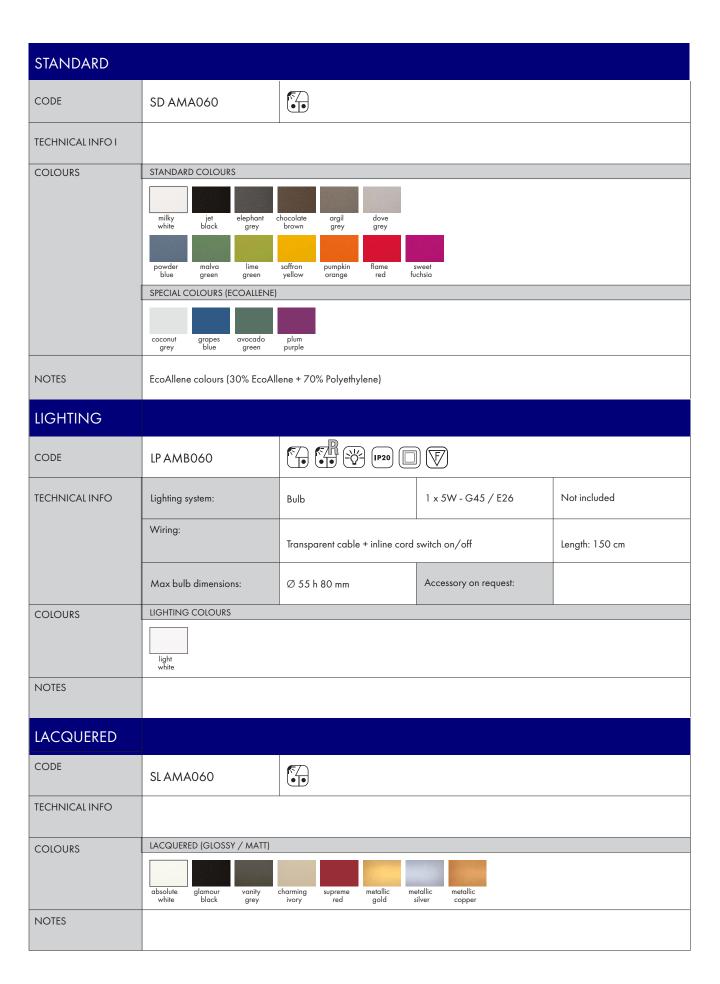

ACCESSORIES

REMOVABLE TRAY



CODE	SD AMB062						
TECHNICAL INFO	Material:	Wood					
	Dimensions:	46 x 42 h 3,5 cm	Weight:	1,5 Kg			
COLOURS	DLOURS						
PACKAGING	Inserted into the Amanda box if purchased at the same time.						
NOTES							

SYMBOLS Product for indoor use only. Product for indoor and outdoor use. Product version for outdoor on request. Fireproof product. Product with soft seat. Product with special packaging. Stackable product. (**c**€) Product made with 100% recyclable material. Conformity to the European Community instructions. . LIGHTING SYMBOLS Lighting system compatible with LED light bulbs. (LED) RGB RGB LED multicolour system. LED lighting system. LED 3W battery RGBW LED system included. LED tube lighting system. Product compatible with Candy Light module. Product compatible with Candy Light XL module.. Product with base model I1. [11] [E1] Product with base model E1. Product with base model E1. 13 [E3] Product with base model E3. Protected against the intrusion of solid objects IP20 \emptyset > 12 mm, not against water. Protected against the intrusion of dust and IP55 water jets. Fully protected against the intrusion of dust and immersion in water. Insulation class 1. Insulation class 2. Insulation class 3. Device proper to direct assembly onto normally inflammable surfaces. On request, the photometric data of the product are

available in EULUMDAT standard or a similar one.

MAINTENANCE & CLEANING

EN - Check the material composition of the product on the technical sheet on www.slidedesign.it.

- To prevent dust and dirt from sticking to the plastic surfaces, periodically clean the products.
- Avoid using ethanol or any liquids containing acetone, trichloroethylene or ammonia (solvents in general).
- **POLYETHYLENE**: clean the product with a damp cloth and neutral liquid soap diluted in water. It is recommended the use of SLIDE's "CleanUp" cleaner or a degreaser. In case of persistent stains, use a scrub eraser (melamine foam Scotch-Brite Easy Eraser or similar) or a hot water pressure washer. Spray the cleaning product on the surface, rub with a damp cloth and rinse abundantly with hot water.
- **POLYURETHANE**: clean the products with a soft cloth and neutral liquid soap diluted in water, especially if the surface comes into contact with highly coloured substances (such as coffee, tea, oil, etc.).
- **POLYPROPYLENE**: clean the products with a damp cloth and neutral liquid soap diluted in water and degreaser. Rinse with plenty of water.
- Lacquered version: periodically clean with a polish cleaner, gently rubbing with soft cloth/cotton wool.
- Fabrics can be cleaned with a damp cloth, neutral liquid soap and water.
- For metal parts use specific cleaners.
- For **HPL**, clean the surface with a damp cloth and neutral liquid soap diluted in water.



Product made with 100% recyclable material.



Certifies the conformity of the product to the European Community instructions



Appliance suitable for installation on normally inflammable surfaces.



Recycling and disposal of electronic waste (WEEE).



WARRANTY

EN - SLIDE products are guaranteed against all manufacturing faults, granted that the items are appropriately used, for twenty-four (24) months from the date of purchase upon presentation of the invoice.

LEDs are guaranteed for twelve (12) months from the date of purchase.

Warranty doesn't include parts that are subject to wear and tear due to usage, batteries when provided, wiring and electrical parts that do not have manufacturing faults.

SLIDE declines any liability to damages caused to things or persons by an illegitimate use of the product.


SLIDE won't accept any returned goods without having checked the kind of defects first.



EN - Warning: the appropriate use of these instructions ensures the good maintenance of the product. Always consult the technical sheet of the product on the www.slidedesign.it website.

- Before any operation on the fixture, please disconnect the power supply.
- Assembly and manteinance of the fixture must be performed carefully so components are not damaged.
- Replacement bulbs must be the same type and wattage as specified in the technical sheet. Use LED bulbs only.
- In case of damage to the feeding cable, please contact a SLIDE dealer or qualified personnel for replacement.
- Keep away from excessive heat sources.
- Avoid any improper use. Do not stand on the products. When the product has to be moved, lift the product off the ground in order to avoid damages.
- Always protect the product with its original packaging when not in use for a long time.

ASSEMBLY INSTRUCTIONS

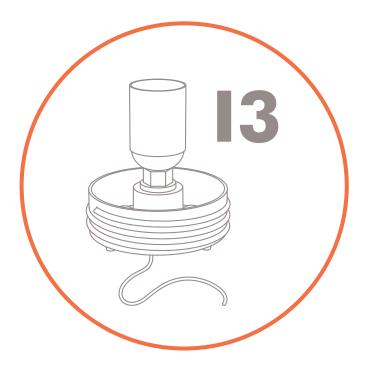



Certifies the conformity of the product to the European Community instructions.



Appliance suitable for installation on normally inflammable surfaces.




Class 2: appliance fitted with double insulation, without ground connection.




Appliance for indoor use only.

BULB REPLACEMENT

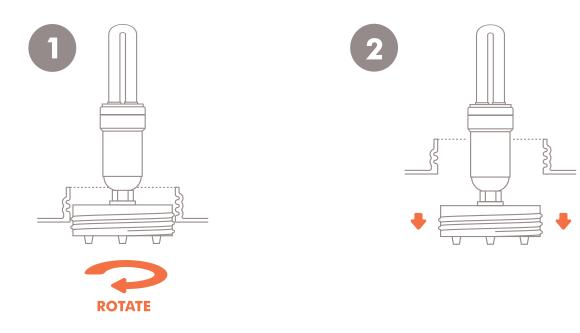

SYSTEM FOR FLOOR/WALL MOUNTING

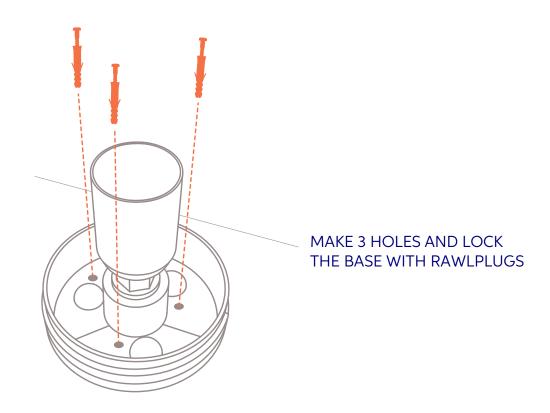

MAINTENANCE & CLEANING

EN - Check the material composition of the product on the technical sheet on www.slidedesign.it.

- To prevent dust and dirt from sticking to the plastic surfaces, periodically clean the products.
- Avoid using ethanol or any liquids containing acetone, trichloroethylene or ammonia (solvents in general).
- POLYETHYLENE: clean the product with a damp cloth and neutral liquid soap diluted in water.
 It is recommended the use of SLIDE's "CleanUp" cleaner or a degreaser. In case of persistent stains, use a scrub eraser (melamine foam Scotch-Brite Easy Eraser or similar) or a hot water pressure washer.
 Spray the cleaning product on the surface, rub with a damp cloth and rinse abundantly with hot water.
- POLYURETHANE: clean the products with a soft cloth and neutral liquid soap diluted in water, especially if the surface comes into
 contact with highly coloured substances (such as coffee, tea, oil, etc.).
- **POLYPROPYLENE**: clean the products with a damp cloth and neutral liquid soap diluted in water and degreaser. Rinse with plenty of water.
- Lacquered version: periodically clean with a polish cleaner, gently rubbing with soft cloth/cotton wool.
- Fabrics can be cleaned with a damp cloth, neutral liquid soap and water.
- For metal parts use specific cleaners.
- For **HPL**, clean the surface with a damp cloth and neutral liquid soap diluted in water.



Product made with 100% recyclable material.



Recycling and disposal of electronic waste (WEEE).



WARRANTY

EN - SLIDE products are guaranteed against all manufacturing faults, granted that the items are appropriately used, for twenty-four (24) months from the date of purchase upon presentation of the invoice.

LEDs are guaranteed for twelve (12) months from the date of purchase.

Warranty doesn't include parts that are subject to wear and tear due to usage, batteries when provided, wiring and electrical parts that do not have manufacturing faults.

SLIDE declines any liability to damages caused to things or persons by an illegitimate use of the product.

SLIDE won't accept any returned goods without having checked the kind of defects first.



EN - Warning: the appropriate use of these instructions ensures the good maintenance of the product. Always consult the technical sheet of the product on the www.slidedesign.it website.

- Before any operation on the fixture, please disconnect the power supply.
- Assembly and manteinance of the fixture must be performed carefully so components are not damaged.
- Replacement bulbs must be the same type and wattage as specified in the technical sheet. Use LED bulbs only.
- In case of damage to the feeding cable, please contact a SLIDE dealer or qualified personnel for replacement.
- Keep away from excessive heat sources.
- Avoid any improper use. Do not stand on the products. When the product has to be moved, lift the product off the ground in order to avoid damages.
- Always protect the product with its original packaging when not in use for a long time

